



Globalstar SmartOne LP Managed Asset Tracker – Quick Start Guide

1. Remove mounting and battery housing plates.
2. Install Qty 4 Energizer ultimate lithium AA 1,5v batteries (or equivalent) lithium batteries see Battery Specifications.
3. **IMPORTANT:** The antenna is mounted on the same side as battery housing and **MUST** face towards the sky.

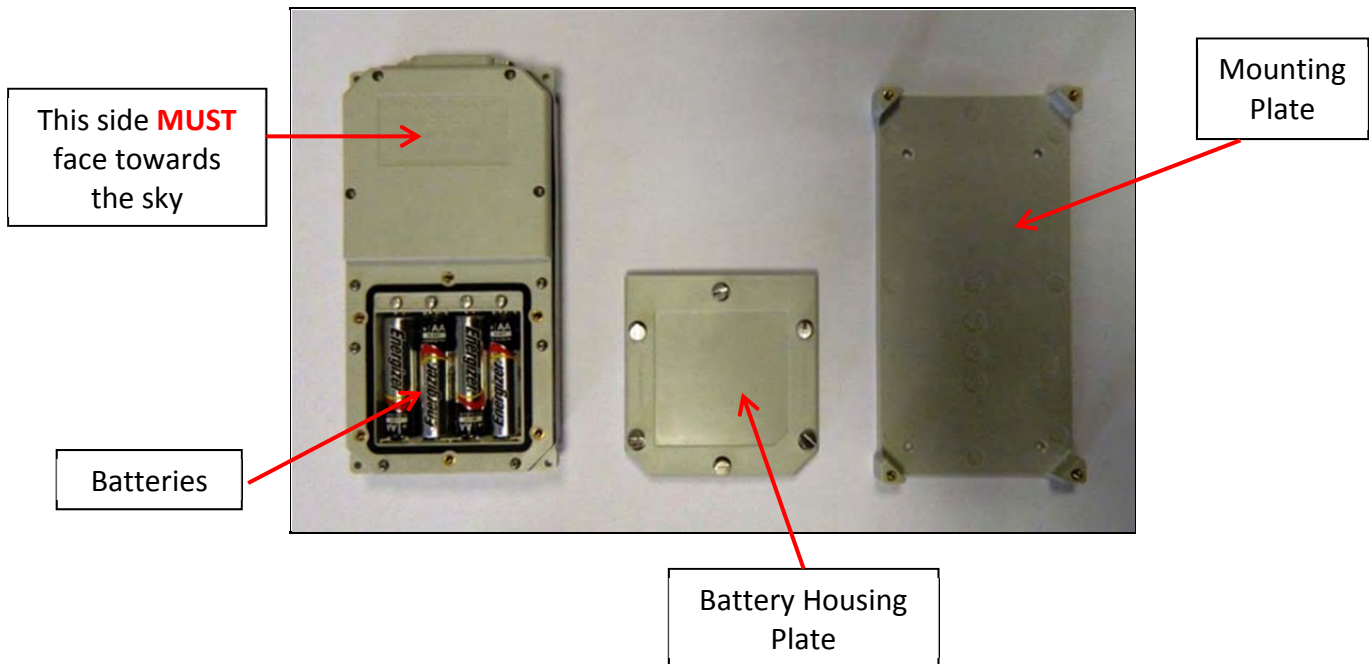

4. Once the batteries have been installed the SmartOne can be mounted in its operational location.
5. The SmartOne unit is shipped in the off position.

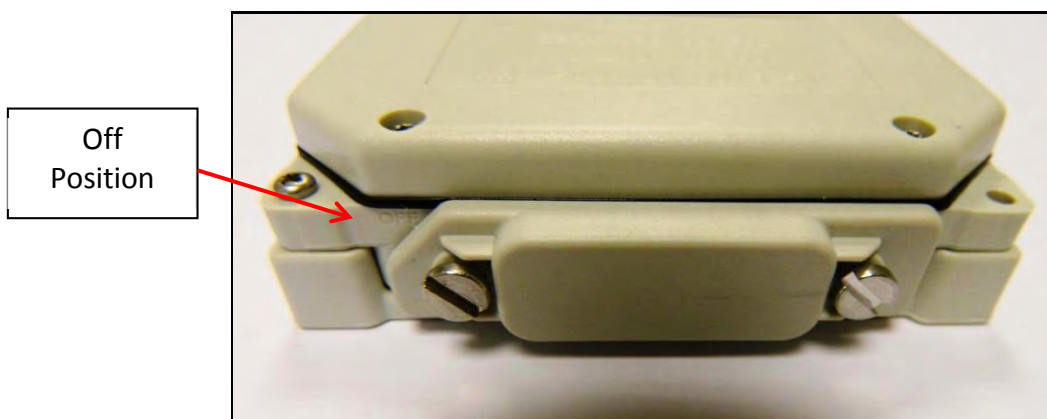

6. Remove connector cover plate.



7. Replace the connector cover plate in the on position to enable reporting functionality.



On
Position

8. Battery Specifications

Classification:	Cylindrical Lithium
Chemical System:	Lithium/Iron Disulfide (Li/FeS ₂)
Designation:	ANSI 15-LF,IEC-FR6
Nominal Voltage:	1.5 Volts
Storage Temp:	40°C to 60°C 9-40°F to 140°)
Operating Temp:	40°C to 60°C 9-40°F to 140°)
Typical Weight:	14.5 grams (0.5 oz.)
Typical Volume:	8.0 cubic centimeters (0.5 cubic inch)
Max Discharge:	3.0 Amps Continuous
(Single battery only)	5.0 Apms Pulse (2 sec on / 8 sec off)
Max Rev Current:	2 uA
Typical Li Content:	Less than 1 gram
Typical IR:	90 to 160 milliohms (depending on method)
Shelf Life:	15 years at 21°C
Transportation:	For complete details, please reference: Global (except US): Special Provision A45 of the International Air Transportation Association Dangerous Goods Regulations. United States:49 CFR 173.185